

Infinix



SURF Spice

User Guide / Manuel d'utilisation / دليل المستخدم

Getting Started

Removing the back cover


Remove the battery cover and the battery properly and you will see three card slots .

Inserting SIM cards


The device is a dual SIM mobile phone that allows you to connect to two different networks at the same time.

To insert SIM card(s):

1. Insert the SIM card into the card slot properly(see figure below).

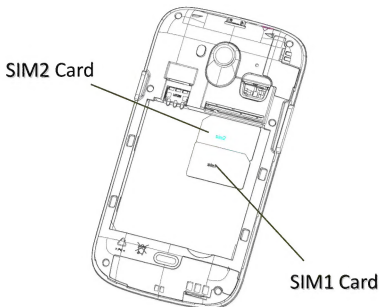


2. Insert the T card properly (see figure below).

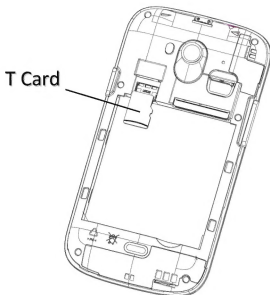


Charging the phone

You can charge your battery using the charger or by connecting it to a computer through a USB cable (Included with the phone).

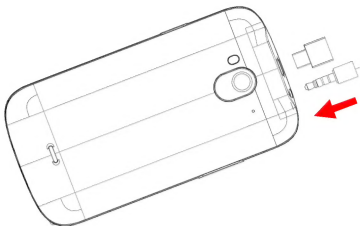


Keys and Parts

The phone supports 3G SIM cards and its camera, video recorder, FM radio, and music and sound recorder offer amazing experiences. You can install various applications, games and many more (supports APK format) which can be downloaded from the Google Play.

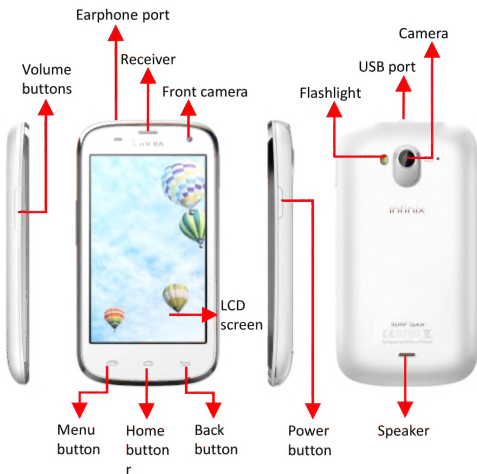

Locking and Unlocking the Screen

Press the power button to put the device in Sleep mode and lock the screen. Press the power button again and swipe the lock icon down to unlock the screen.

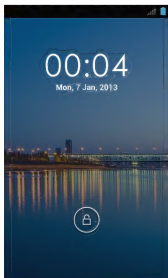


Customizing the Device


- 1) Home screen: This is the starting screen that provides access to the different features of the phone. It displays the applications, widgets, shortcuts and other features.
- 2) Notification Bar: The status bar shows the time, status and notifications at the top of the screen. You can drag the bar down to open the notification panel where you can access new messages, missed calls or other notifications. Once you are done, you can close the panel by dragging it up or pressing the Back button.
- 3) Shortcut bar: Touch the application icons on the shortcut bar at the bottom of the screen to access the basic functions.



Home screen

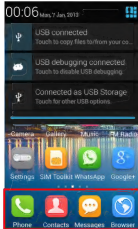

Shortcut bar

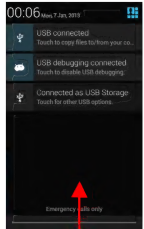

Notification Bar

Adding Widgets and icons to Home Screen

Adding widgets and icons on the home screen

Open the Launcher, then press and hold an application until it is displayed on the Home Screen before releasing your finger.

Rearranging or removing widgets and icons from the home screen

a) Press and hold the widget or icon that you wish to move. When the Remove option appears, drag the widget or icon to a new location on the screen.


b) Press and hold the widget or icon that you wish to remove for several seconds and drag to the Remove option at the top to remove it!



Applications

Opening and switching between applications

All the applications on the device, including any application that you have downloaded from Google Play and other sources, are displayed on screen. On the Home Screen, tap the Launcher icon to open the Main Menu.

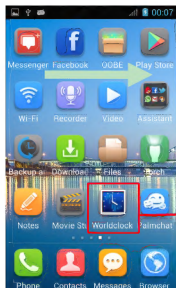


Swipe the screen to the left or right to see more applications.

Tap an application to open it.

Press the home or back button to close the Launcher.

Switching to a recently used application


Press and hold the  icon for a few seconds.

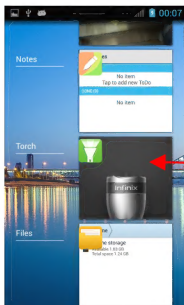


Tap to open the application.

Making a Call


On the Home Screen, tap  and dial a complete phone number to make a call.

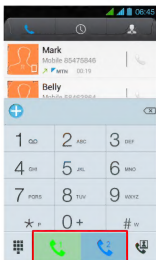


Make a call

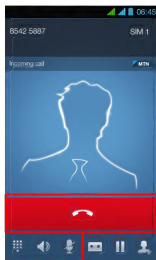

End the call

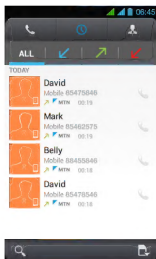


Swipe the screen to the right.

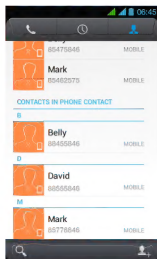

Call Log

You can make a call, add new contact and send messages from the call log.

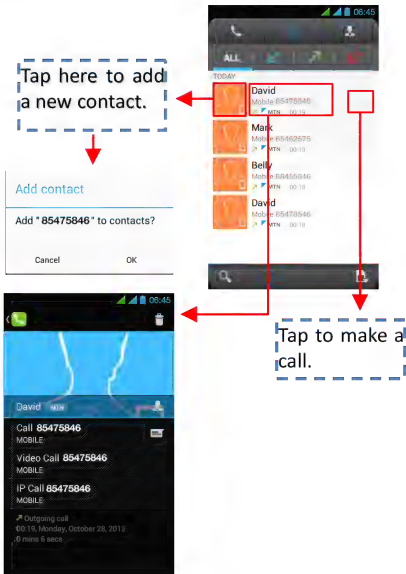

Rejecting a Call by Sending a Busy Message

You can send a busy message to reject a call that you cannot pick up.

Drag the circle up to  and some busy message templates will be displayed on the screen. Tap any of them to send it out.



Adding a Contact

Tap  and enter Contacts to add a new contact .

Tap  to add a new contact to the device or the SIM card memory(see figure below).



ME

2 contacts


Set up my profile

D

David

M

Mark



Phone contact


Name

Add organization

PHONE


Phone

MOBILE

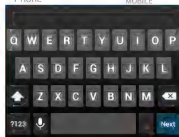


Sending and Receiving Message(s)

Open **Messaging** to create a new message. Tap a text field to bring up the keypad.



Tap here to select a desired contact from the phonebook.

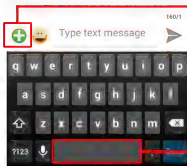


Tap here to add attachments such as pictures, videos and audios files.

Press space or a punctuation mark to input the highlighted suggestion.


While creating a new text message, you can select text for cutting or copying. The selected text is highlighted in blue.

Tap the text field or portion that you would like to cut or copy (see figure below). You can select all text, copy, cut and paste.

When you receive a new message, you can read it by dragging down the notification panel and clicking the message, or accessing Messages to read it directly.

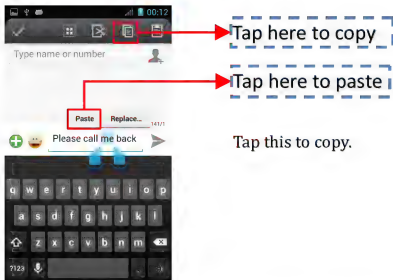


1. Press and hold one of the message threads to delete it.
2. Press and hold a message in a conversation window

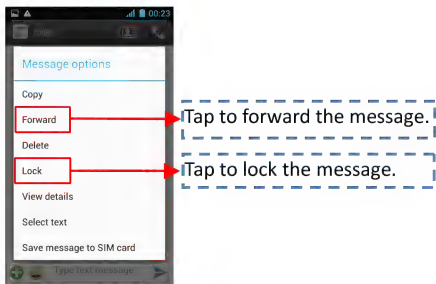

3. Tap **Forward** in the Options menu.
4. Add a contact.
5. Tap Send to send the message.

Browsing the Web

Turn on data connection or Wi-Fi.

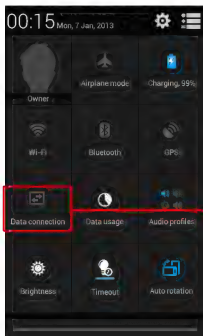


Tap to turn data connection on and off.

Tips: Data connection is required for browsing the web.

You can connect to a Wi-Fi network if it is available. Some Wi-Fi networks are password-protected.

Enjoying Music

The Music player searches for music files inside the device's internal storage and builds a library based on the information of each file.

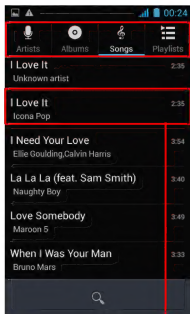


Tap to view your library in four different ways.

Tap to open an album, song or playlist.




Downloading Applications From Google Play

1、Add a Google account.

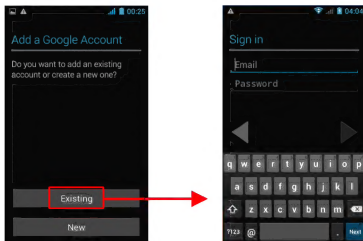



2、Enter Google Play and download an applications.

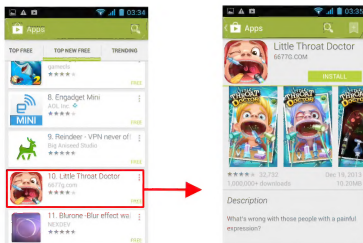

Managing Applications

Enter Setting >Apps, then manage the applications.

To install applications you have downloaded from third-party sources, the “Unknown sources” option in the security settings must be checked.

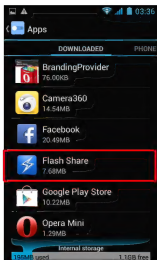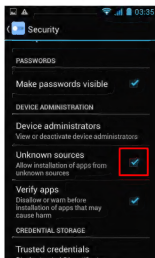

Infinix